


PRESTIGE P665VX

Grill Skirt

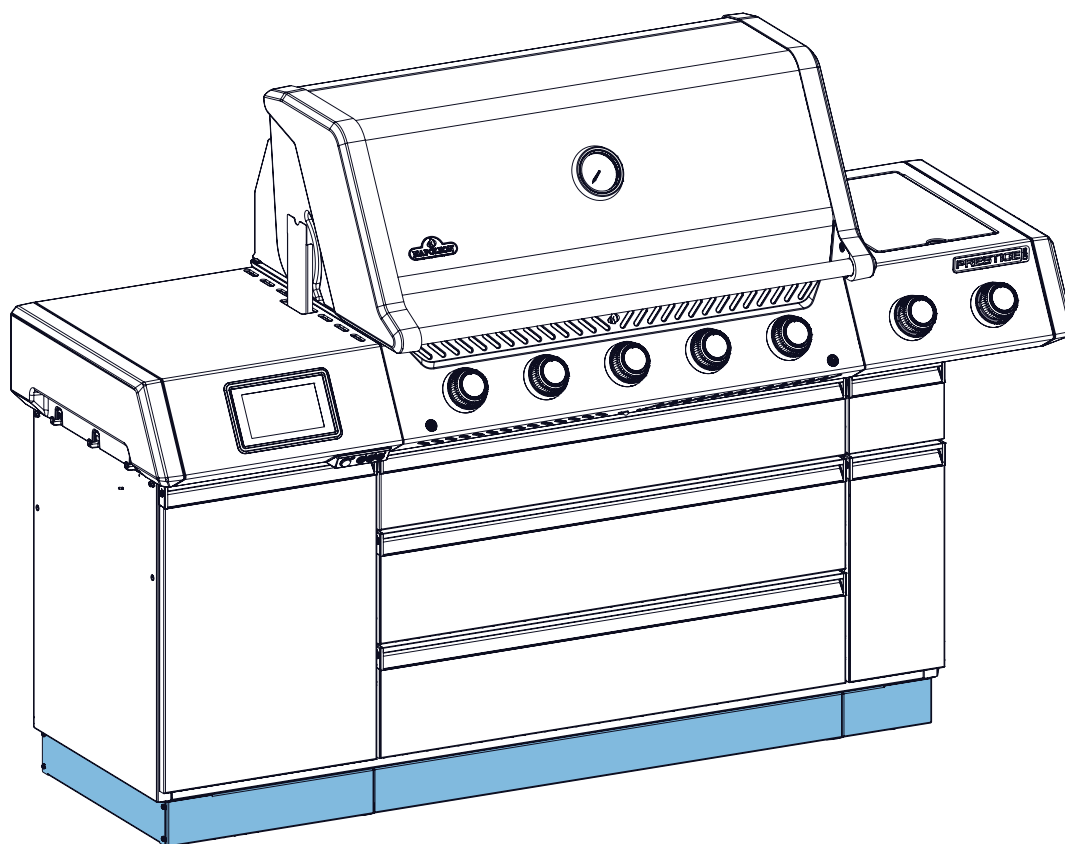

EN

NL

HR

DK

CZ

GR

NO

IT

FI

SE

PL

SI

SK

UA

RU

Tools required



3/8
(10 mm)




3/8
(10 mm)




Wear gloves when assembling or attaching the skirt to avoid minor cuts or pinching.


How to Install the Grill Skirt

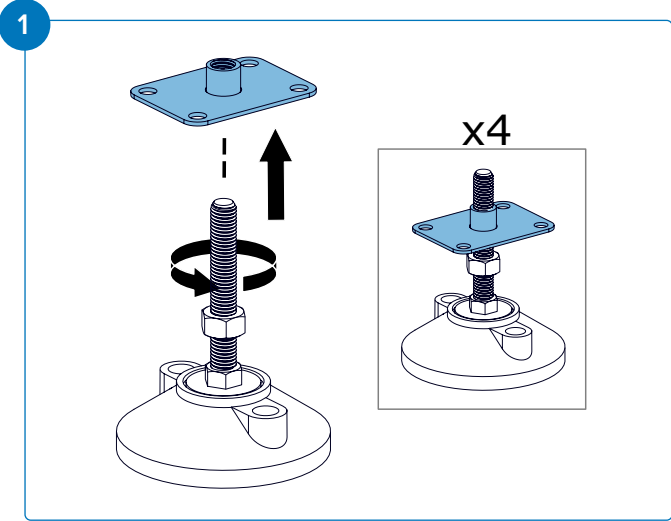


Thread the leveling foot into the plate and assemble a total of four leveling feet.

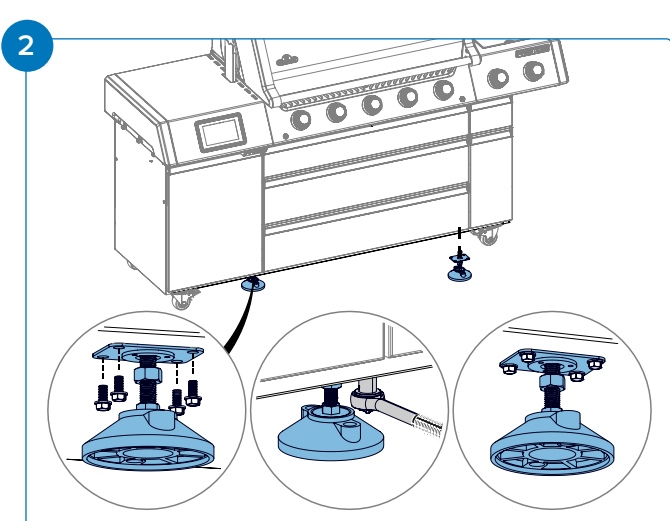


  x8
Install two leveling feet at the front; for easier installation, safely prop the unit on one side.

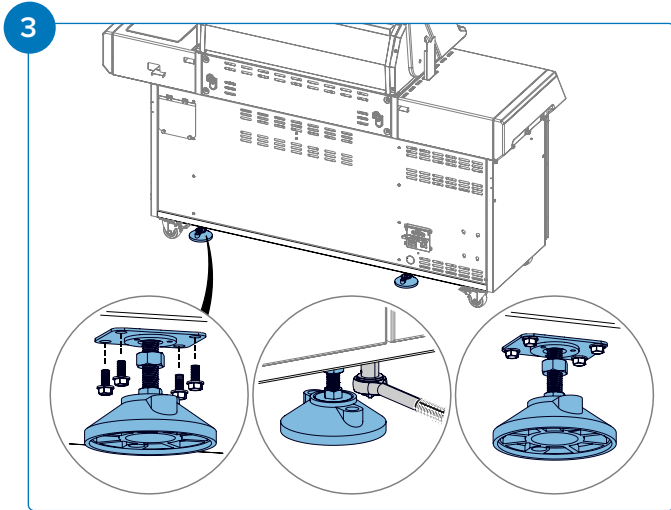


   x8
Install two leveling feet at the back; again, safely prop the unit on one side for ease of installation.

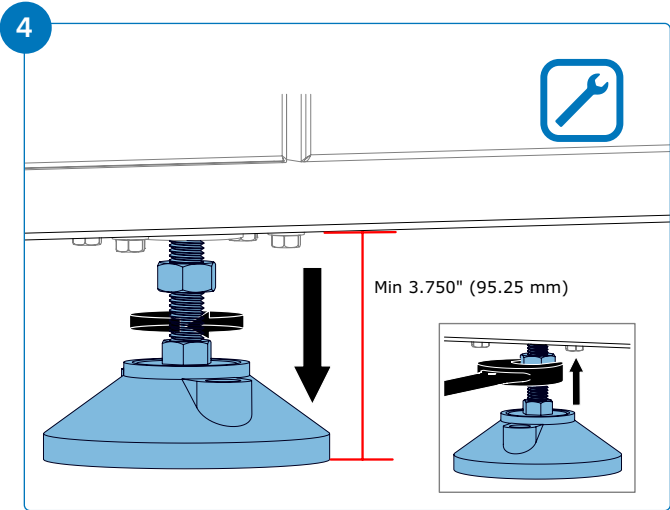


Position the leveling feet so there is a minimum clearance of 3.75 in (95.25 mm) from the bottom base to the bottom of the foot, then tighten the nut to secure each foot in place.

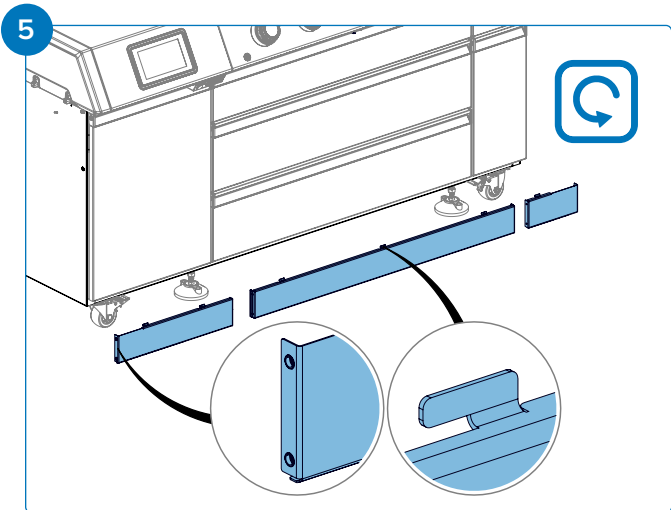


Locate the three front skirt pieces and line them up in front of the unit to match the BBQ sections, ensuring all top hooks point in the same direction.

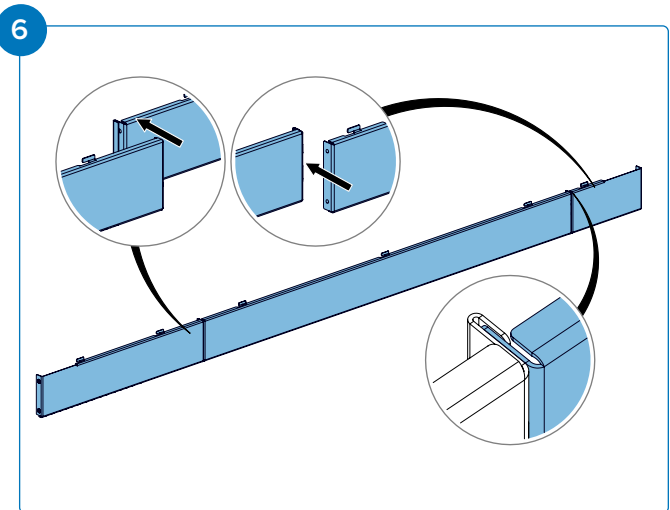


Connect the three front skirt pieces together.

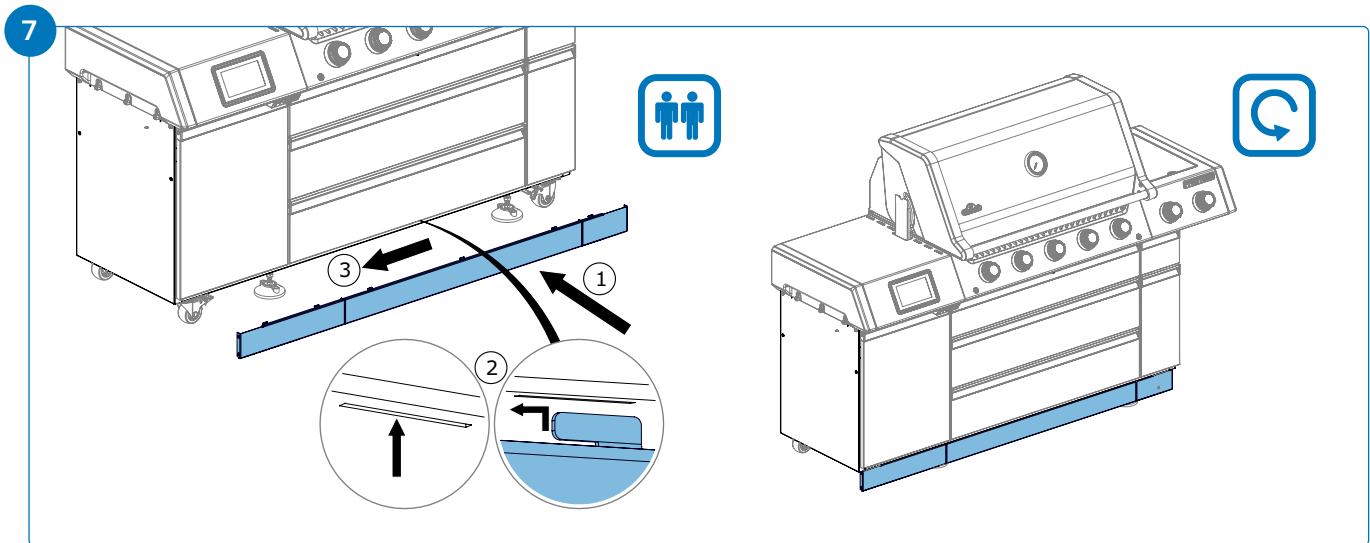


Insert the front skirt panel hooks into the slots under the unit and slide the panel to the left.

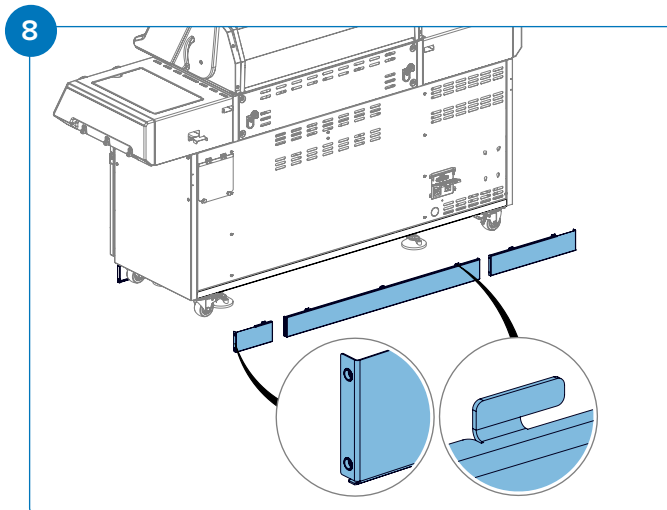


Locate the three back skirt pieces and line them up to match the BBQ sections, ensuring all top hooks point in the same direction.

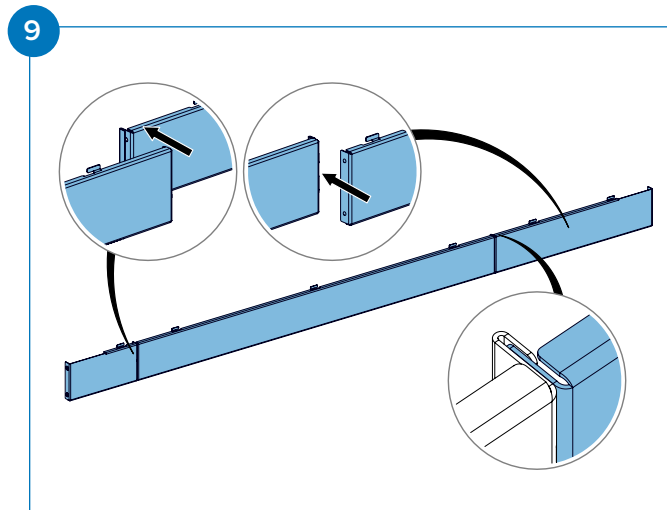


Connect the three back skirt pieces together.

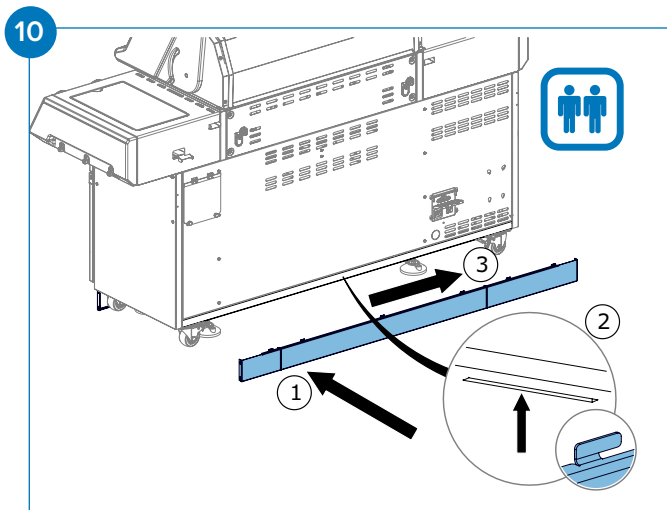

Insert the back skirt panel hooks into the slots under the unit and slide the panel to the right.

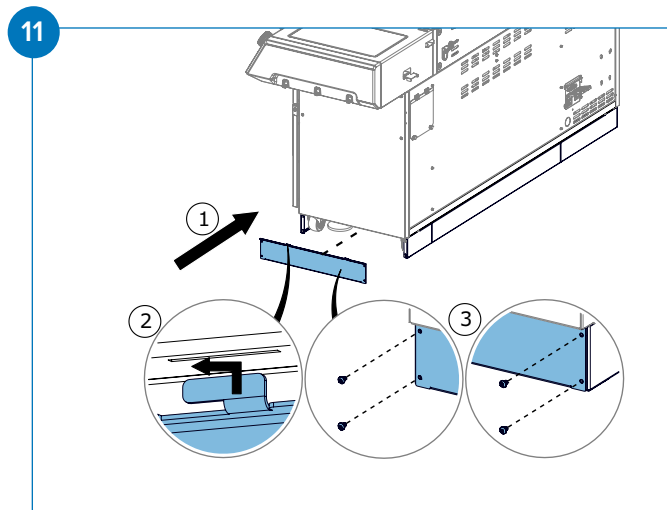

Insert the first side skirt panel hooks into the slots under the unit, then slide the panel to the left and secure it.

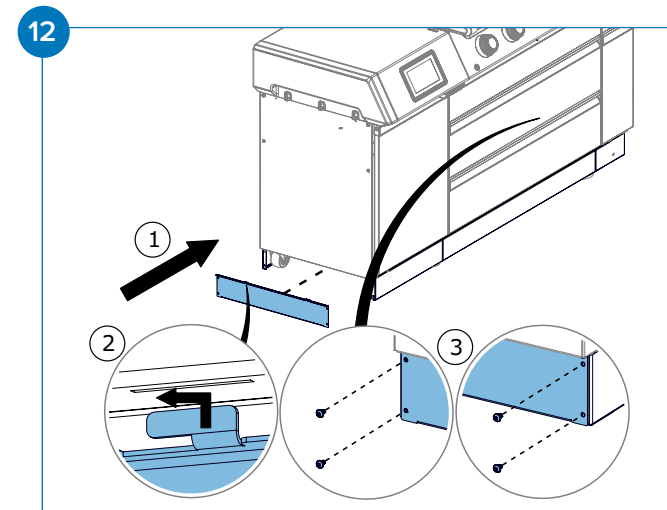

Insert the second side skirt panel hooks into the slots under the unit, then slide the panel to the left and secure it.



KEEP THESE INSTRUCTIONS

De Riemsdijk 22, 4004 LC, Tiel, Nederland
10-12 Home Farm, Meriden Road, Berkswell, CV7 7SL, United Kingdom
24 Napoleon Road, Barrie, Ontario, L4M 0G8, Canada
+31 (0) 88 588 66 55 · www.napoleon.com